Form 070.252-SPL (OCT 2023)
Service Parts List
File: Service Manual - Section 70
Replaces: 070-252 SPL (AUG 2019)

Service Parts List

TDSB
Rotary Screw Compressor

Model: 355U

Check www.FrickCold.com for the latest version of this publication.

Table of contents

Using the service parts list 2
Recommended spare parts kits 3
Figure 1a: TDSB 355U Screw compressor cross section, top 4
Figure 1b: TDSB 355U Screw compressor cross section, side 5
Figure 1c: TDSB 355U Screw compressor cross section, details 6
Figure 2: Slide valve indication mechanism 10
Figure 3: Slide stop indication mechanism 11
Figure 4: TDSB 355U Screw compressor port locations 12
Table 1: TDSB Compressor ports description 13
Table 2: 90° Elbow adapters/O-rings - straight thread to tube 13
Table 3: Straight adapters/O-rings - straight thread to NPTF 13
Table 4: FRICK compressor oils 14
Table 5: FRICK sea blue paint 14
Table 6: Electric motor bearing grease 14
Table 7: Numerical parts list 15

Using the service parts list

This Service Parts List is for standard FRICK® TDSB 355U Rotary Screw Compressor Units. Units built with special options, modifications, or conversions are not taken into consideration.

This Service Parts List provides identification for detail parts by figure and index number, item number, and description. To determine correct replacement:

1. Locate an item on a figure.
2. Note the index number.
3. Refer to the corresponding index number in the parts list for the item number and description.

Quantity per assembly is shown in the Qty. column. Unit of measure is always each, unless specified otherwise in the Qty. column. Ref. in the Qty. column indicates that the item number is for reference only and is not necessarily a service replacement part. Contact Baltimore Parts Center for more information. Rev. (Revision) column shows the level of the engineering drawing used.

Use the Numerical Parts List to locate a specific item in the Service Parts List. Look for the part by using the FRICK item number, which refers you to the specific figure and index number where it is located.

Abbreviations found in this manual include:
Qty. ..... quantity Ref. ..... reference Rev. ..... revision

Note: Provide the FRICK order number, unit model number, and unit serial number when you request a quotation or place an order. Failure to include this information may delay processing of your request. The model and serial number number plate is found on the rotor casing assembly.

Recommended spare parts kits

Description	Kit	Symbol
Shaft Seal Kit	534M0163G05 (1)	●
O-ring and Gasket Kit	534M0027G03 (2)	■
Slide Stop Pot. Kit	111Q0041148	✤
Slide Valve Pot. Kit	534D0523G02	✱
Balance Piston Kit	534M0557G05	★
Bearing Kit*	534A0921G01	▲
Compressor Tool Kit	534A0213G01	

Note: When stocking the above components, adjust the quantity to meet your individual requirements. Items in the following parts lists with matching symbols are included in the listed kits.

*Contains shims necessary to set end play and clearance.

(1) For R-22 service, use kit 534A1280G01.
(2) For R-22 service, use kit 534B2460H01.

Figure 1a: TDSB 355U Screw compressor cross section, top

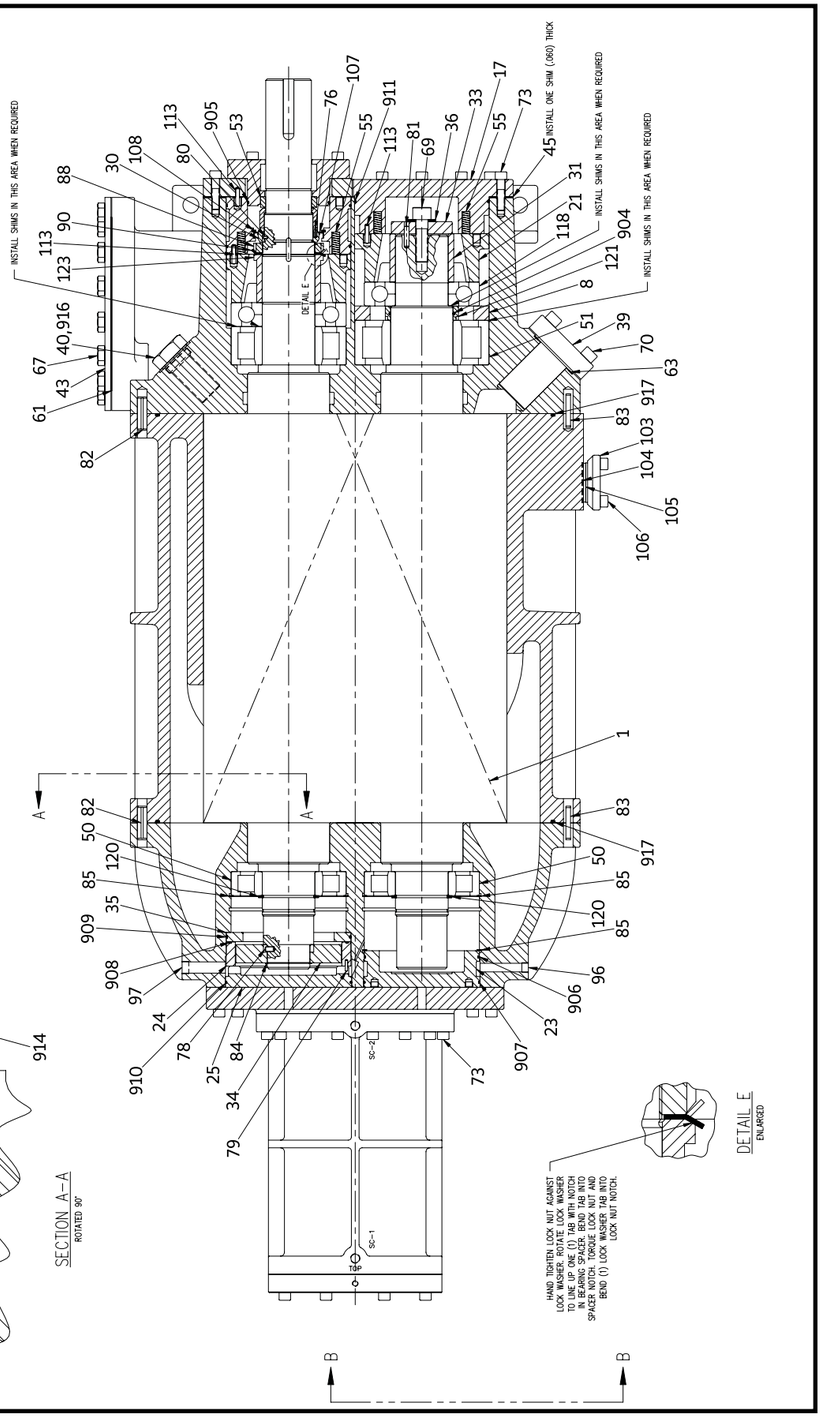


Figure 1b: TDSB 355U Screw compressor cross section, side

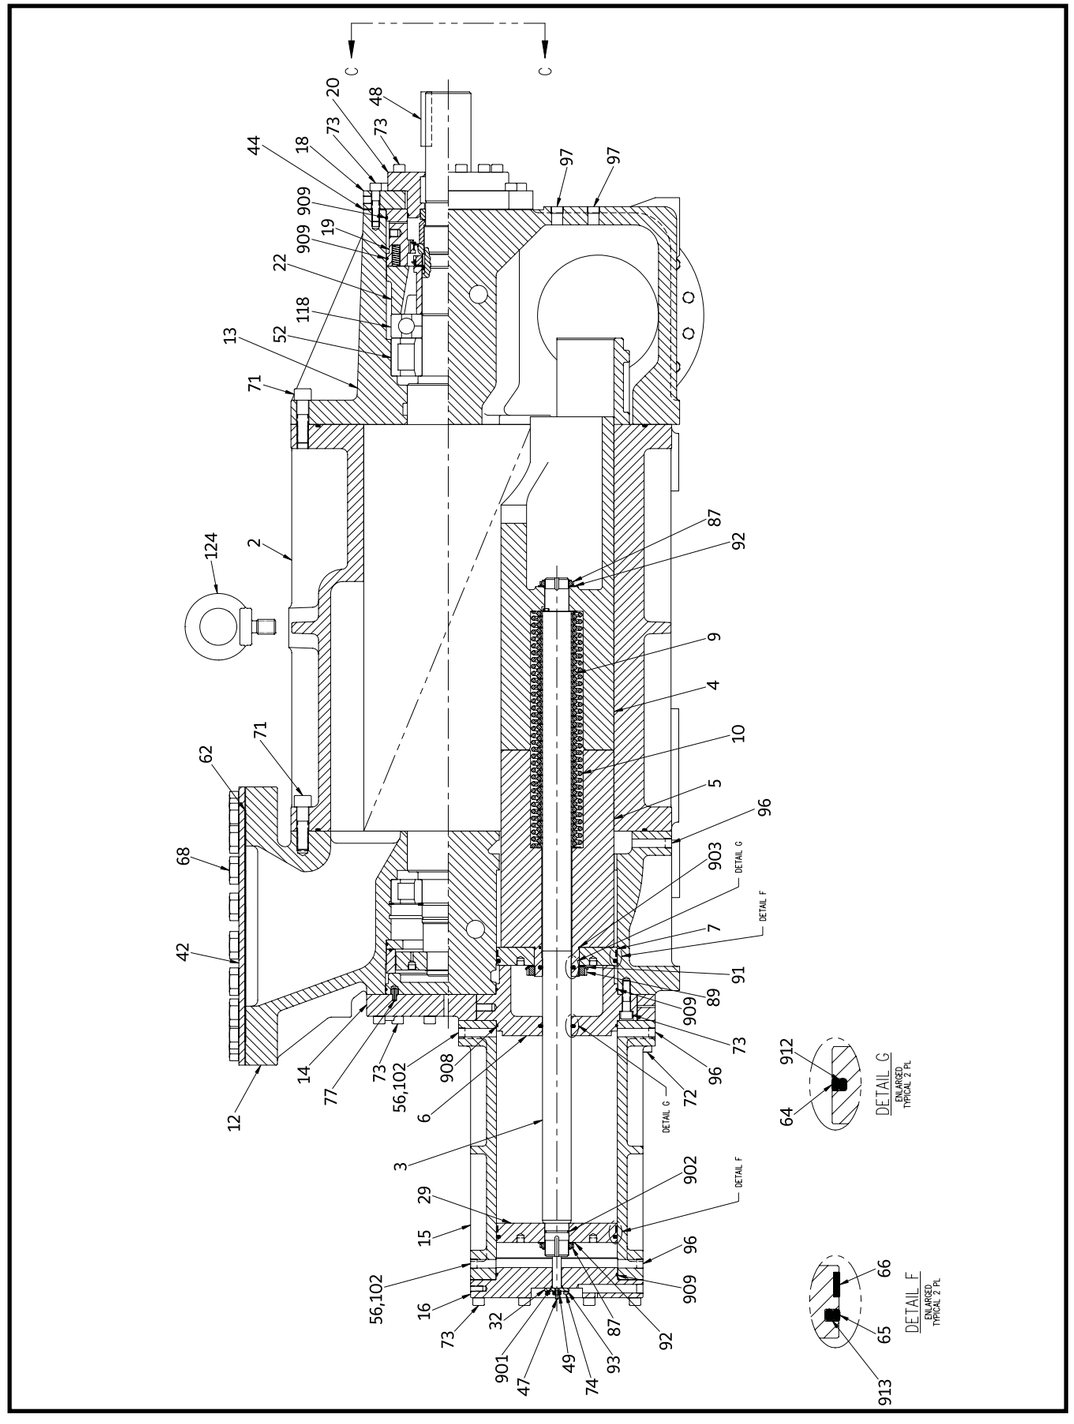


Figure 1c: TDSB 355U Screw compressor cross section, details

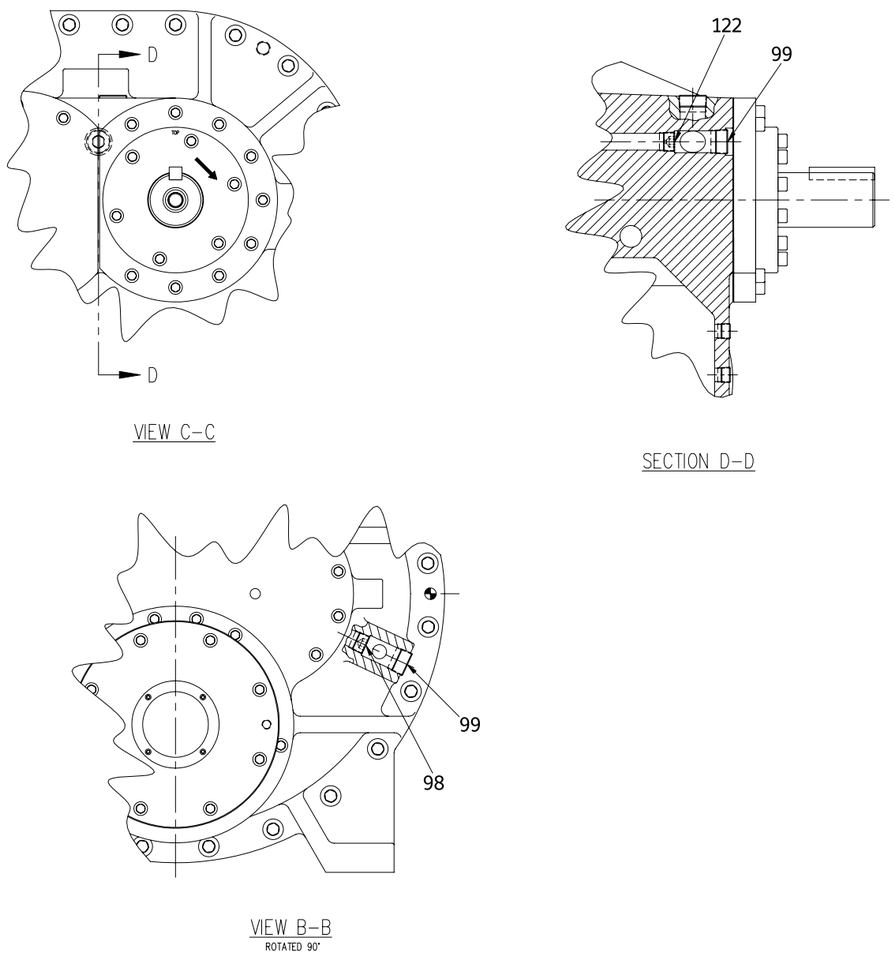


Fig. and index	Item number	Description	Qty.	Rev.
1–	534D1170G01	Assembly, Compressor, TDSB 355U	Ref.	U
–1	534A0839G02	Rotor Pair	1	
–2	534D0407G05	Assembly, Rotor Housing	1	
	534D1041C01	Guide, Slide Valve	1	
	111Q0740741	Capscrew, Socket Head	4	
	534A0634H02	Pin, Dowel, Vented	2	
	534C0194H51	Plug, w/.709 in. Orifice	1	SM-1
–3	534D0464G12	Assembly, Spindle	1	
	534D0390H03	Spindle	1	
	534A0191H02	Bushing	1	
	534A0193H02	Pin, Crowned	1	
	534A0037H02	Pin, Dowel	1	
–4	534D1166C01	Valve, Slide	1	
–5	534D1168C01	Stop, Slide	1	
–6	534D0862C01	Cover, Slide Stop	1	
–7	534D0367C01	Piston, Slide Stop	1	
–8	534D0412C01	Spacer, Bearing	1	
–9	534B0240H01	Spring, Unloader	1	
–10	534B0242H01	Spring, Unloader	1	
–12	534D1606C01	Casing, Inlet	1	
–13	534E1077C01	Casing, Discharge	1	
–14	534D0370C01	Cover, Inlet	1	
–15	534E0683C01	Cylinder	1	
–16	534D0369C01	Cover, Cylinder	1	
–17	534D1402C01	Cover, Outlet	1	
–18	534D1400C01	Cover, Seal Housing	1	
–19	534D1401C01	Spacer, Seal Housing	1	
–20	534D0766C01	Cover, Housing	1	
–21	534D1135C02	Spacer, Bearing Preload (Female)	1	
–22	534D1135C01	Spacer, Bearing Preload (Male)	1	
–23	534D0375C01	Cover, Female Inlet Bore	1	
–24	534D0391C01	Sleeve, Male Balance Piston ★	1	
–25	534D0374C01	Cover, Male Inlet Bore	1	
–26	534D0523G01	Mechanism, Slide Valve Indication	1	
–27	534D0363G01	Mechanism, Slide Stop Indication	1	
–28	534B0055G05	Assembly, Indicator Rod	1	
–29	534D0368C01	Piston, Spindle	1	
–30	534C0487H01	Ring, Seal Distance	1	
–31	534B0651H01	Spacer, Bearing	2	
–32	534B0112H01	Plate, Backing	1	
–33	534C0492H01	Plate, Bearing	1	
–34	534D0639H01	Piston, Male Balance ★	1	
–35	534D0392H01	Ring, Male ★	1	
–36	534B0239H01	Washer ▲	1	
–37	534A0031H01	Spacer	1	
–38	534A0034H01	Plug, Seal	1	
–39	534C0493C01	Plug, Vapor Injection	1	SV-1
–40	534C0569H01	Plug, Liquid Injection	1	SL-2
–41	534C0570H01	Plug, Liquid Injection	1	SL-1
–44	534D0408G01	Shim Pack (Female)	3	
–45	534C2157H01	Shim (Female)	1	
–46	534A0033H01	Bearing	1	
–47	534C1356H03	Shaft, Potentiometer	1	
–48	534A0662H04	Key, Square	1	
–49	534B0182H01	Collar, Clamp	1	
–50	534B0004H34	Bearing, Cylindrical Roller ▲	2	
–51	534B0004H25	Bearing, Cylindrical Roller ▲	1	

●■★▲ See Page 3 for kit part numbers.

Fig. and index	Item number	Description	Qty.	Rev.
−52	534B0004H26	Bearing, Cylindrical Roller ▲	1	
−53	534C0701H06	Assembly, Shaft Seal ●	1	
−54	534A0032H02	Spring	1	
−55	534A0251H01	Spring	24	
−61	959A0054H34	Sealing Disk	1	
−62	959A0054H36	Sealing Disk	1	
−63	959A0057H18	Gasket, Flange ■	1	
−64	534B0006H07	Seal, Rod	2	
−65	534C0187H11	Ring, Glyd ■	2	
−66	534C0510H01	Ring, Slyd ■	2	
−67	901A0207H03	Capscrew, Hex Head, (M24 x 3.0) x 50 mm	16	
−68	901A0231H01	Capscrew, Hex Head, (M30 x 3.5) x 50 mm	20	
−69	534A0076H04	Capscrew, Socket Head, 1-8UNC x 3 1/2 in. ▲	1	
−70	901A0222H09	Capscrew, Socket Head, (M20 x 2.5) x 75 mm	4	
−71	901A0232H12	Capscrew, Socket Head, (M24 x 3.0) x 90 mm	46	
−72	901A0223H16	Capscrew, Socket Head, (M16 x 2.0) x 120 mm	10	
−73	901A0223H09	Capscrew, Socket Head, (M16 x 2.0 x 65 mm	65	
−74	901A0225H05	Capscrew, Socket Head, (M5 x 0.8) x 16 mm	4	
−75	111Q0740872	Capscrew, Socket Head, (M24 x 3.0) x 100 mm	2	
−76	534A0038H08	Pin, Spring, .250 in. x .625 in. ●	1	
−77	534A0038H10	Pin, Spring, .312 in. x 1.00 in. ● ★	2	
−78	534A0037H19	Pin, Dowel, Ø 10h8 x 20 mm ★	1	
−79	534A0037H10	Pin, Dowel, Ø 5m6 x 24 mm ★	1	
−80	534A0037H12	Pin, Dowel, Ø 5h8 x 10 mm ●	1	
−81	534A0037H15	Pin, Dowel, Ø 10h8 x 45 mm	1	
−82	534B0149H01	Pin, Dowel, 20 mm x 70 mm	1	
−83	534B0151H01	Pin, Dowel, 20 mm x 70 mm, Special	2	
−84	534B0244H01	Ring, Retaining ★	1	
−85	534B0174H09	Ring, Retaining	3	
−86	534B0015H06	Ring, Retaining ■	1	
−87	534B0910H04	Locknut ■	2	
−88	534A0035H13	Locknut ▲	1	
−89	534A0035H09	Locknut	1	
−90	534B0125H13	Lockwasher ▲	1	
−91	534B0125H09	Lockwasher ■	1	
−92	534B0125H14	Lockwasher ■	2	
−93	905A0021H08	Lockwasher	4	
−101	944A0010H09	Bushing	1	
−102	944A0010H05	Bushing	2	
−103	944A0358H03	Flange, Square	1	
−104	959A0057H07	Gasket, Flange ■	1	
−105	531A0117H12	Sealing Disk	1	
−106	901A0223H08	Capscrew, Socket Head, (M16 x 2.0) x 60 mm	4	
−107	534B0426H01	Seal, Lip ●	1	
−108	333Q0000376	Ring, Retaining ●	1	
−112	944A0228H08	Plug, Straight Thread O-ring, 1 1/16-12UN-2A	1	
−113	534A0037H21	Pin, Dowel, 8m6 x 40 mm	3	
−118	534B0101H28	Bearing, Four-Point Contact Ball ▲	2	
−119	534C0194H51	Plug, Orifice, 1 1/4 in. NPTF w/.709 Orifice	1	
−120	534B0014H22	Ring, Retaining	2	
−121	534C1587H01	Spacer, Bearing	1	
−122	534C0194H42	Plug, Orifice, 1 in. NPTF w/.210 Orifice	1	
−123	534C1568H01	Spacer, Bearing	1	
−124	901A0196H12	Ring, Lifting	2	
−900	980A0012A11	O-ring ■	1	
−901	980A0012A67	O-ring ■	1	
−902	980A0012A79	O-ring ■	1	
−903	980A0012B04	O-ring ■	1	

● ■ ★ ▲ See page 3 for kit part numbers.

Fig. and index	Item number	Description	Qty.	Rev.
−904	980A0012B81	O-ring ■	1	
−905	980A0012B90	O-ring ■ ●	1	
−906	980A0012H01	O-ring ■	1	
−907	980A0012H02	O-ring ■	1	
−908	980A0012H03	O-ring ■ ★	2	
−909	980A0012H04	O-ring ■ ● ★	4	
−910	980A0012H05	O-ring ■ ★	1	
−911	980A0012H06	O-ring ■	1	
−912	980A0012H41	O-ring ■	2	
−913	980A0012H81	O-ring ■	1	
−914	980A0012K62	O-ring ■	1	
−915	980A0012K66	O-ring ■	1	
−916	980A0012K74	O-ring ■	2	
−917	980A0012K75	O-ring ■	2	

Figure 2: Slide valve indication mechanism

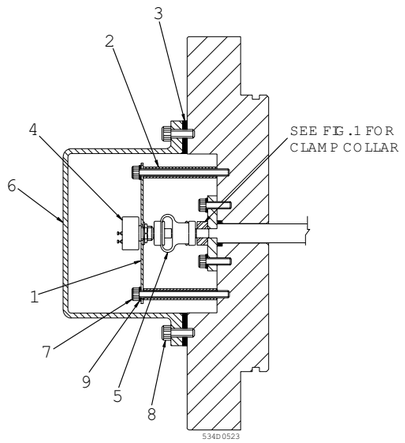


Fig. and index	Item number	Description	Qty.	Rev.
2–	534D0523	Slide Valve Indication Mechanism	Ref.	D
–1	534B0294H01	Plate, Mounting ✱	1	
–2	534A0263H01	Support, Tubing ✱	4	
–3	534A0046H01	Gasket ✱	1	
–4	534B0501H01	Potentiometer ✱	1	
–5	111Q0451313	Coupling, Flexible ✱	1	
–6	534B0062C01	Box, Cover	1	
–7	111Q0740729	Capscrew, Socket Head (5M x 0.8) x 60 mm	4	
–8	111Q0740728	Capscrew, Socket Head (6M x 1.0) x 16 mm	4	
–9	111Q0940141	Lockwasher, 5 mm	4	
		✱ 534D0523G02 Kit, Slide Valve Potentiometer Service	1	

Figure 3: Slide stop indication mechanism

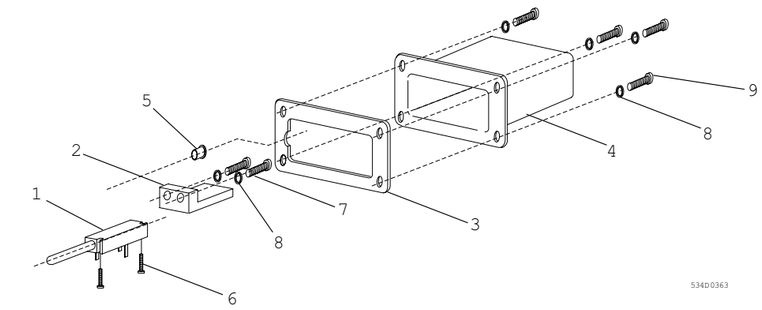


Fig. and index	Item number	Description	Qty.	Rev.
3–	534D0363	Slide Stop Indication Mechanism	Ref.	D
–1	534B0293H01	Potentiometer ✤	1	
–2	534B0283H01	Support, Potentiometer ✤	1	
–3	534B0110H01	Gasket	1	
–4	534C0432C01	Box, Cover	1	
–5	534C0096H13	Bushing	1	
–6	111Q0740784	Screw, Machine, #1-72 UNF x 1/2 in. ✤	2	
–7	901A0085H19	Capscrew, Socket Head (M8 x 1.25) x 30 mm ✤	2	
–8	534C0096H05	Lockwasher, 8 mm	6	
–9	901A0085H04	Capscrew, Socket Head (M8 x 1.25) x 20 mm	4	
		✤ 111Q0041148 Kit, Slide Stop Potentiometer Service	1	

Figure 4: TDSB 355U Screw compressor port locations

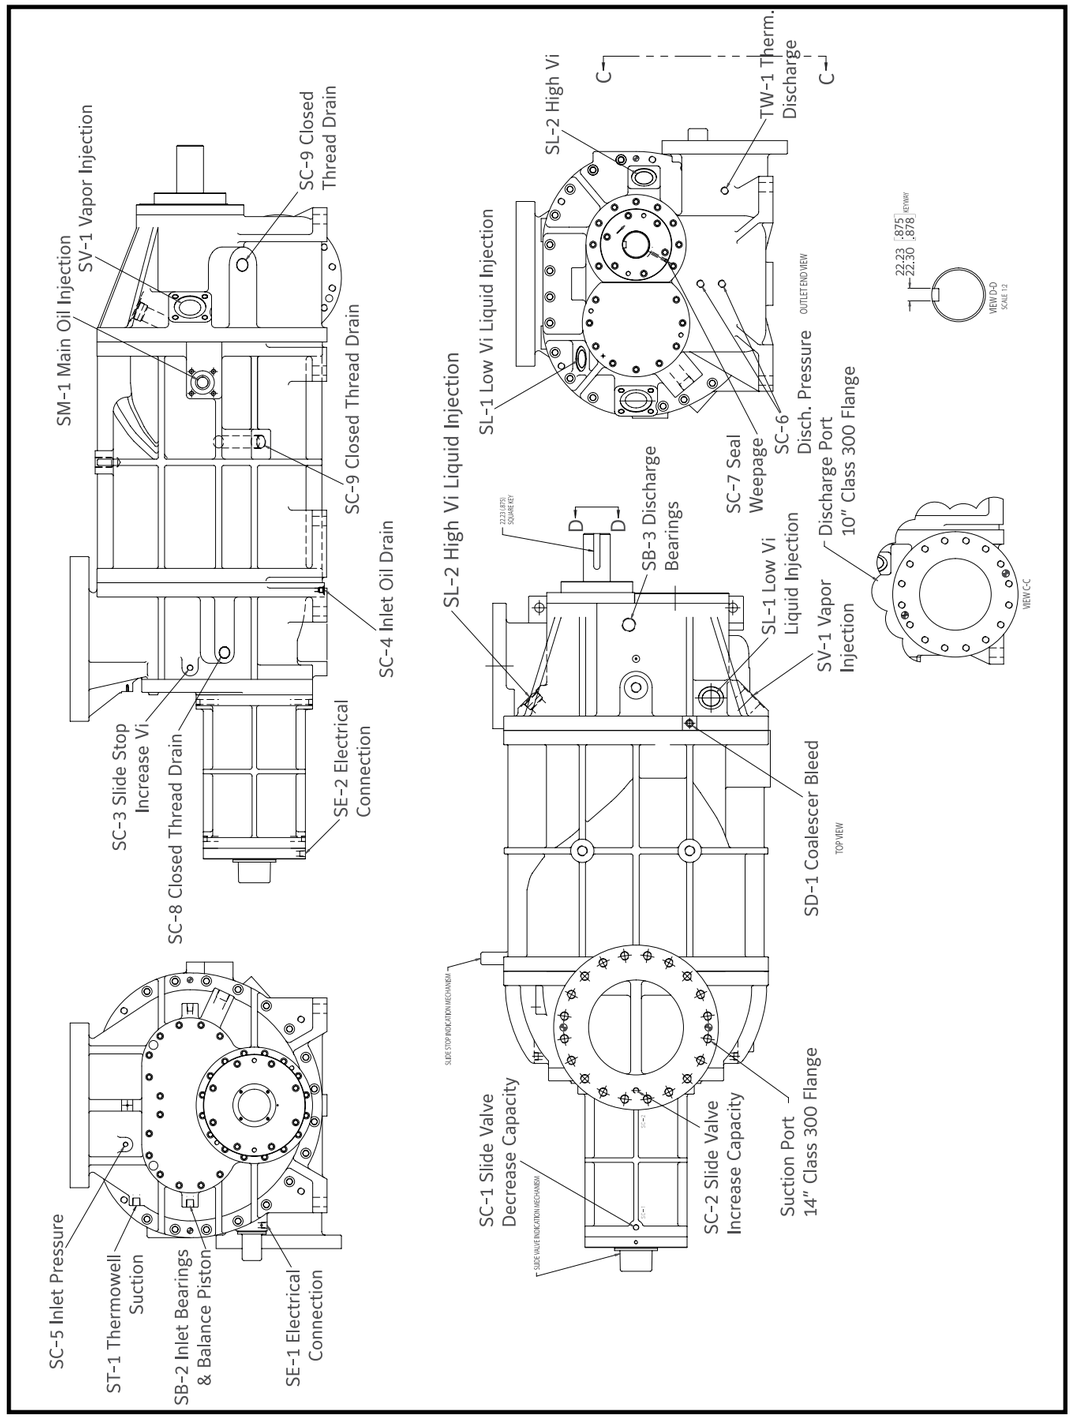


Table 1: TDSB Compressor ports description

Symbol	Size (in.)	Description
SB-2	3/4-14 NPTF	Inlet bearings and balance piston
SB-3	1 1/2-11 1/2 NPTF	Discharge bearings
SC-1	1/2-14 NPTF	Slide valve decrease capacity
SC-2	1/2-14 NPTF	Slide valve increase capacity
SC-3	1/2-14 NPTF	Slide stop increase compressor Vi
SC-4	1/2-14 NPTF	Inlet oil drain
SC-5	3/8-18 NPTF	Inlet pressure
SC-6	3/4-14 NPTF	Discharge pressure
SC-7	1/8-27 NPTF	Seal weepage
SC-8	1 1/4-11 1/2 NPTF	Closed thread drain
SC-9	1 1/2-11 1/2 NPTF	Closed thread drain
SD-1	1 1/16-12UN-2B	Coalescer bleed (std. Thd. O-ring port)
SE-1	1/2-14 NPTF	Electrical connection
SE-2	1/2-14 NPTF	Electrical connection
SL-1	2 1/2-12UN-2B	Low Vi liquid injection
SL-2	2 1/2-12UN-2B	High Vi liquid injection
SM-1	2 in. Square Flange	Main oil injection
ST-1	3/4-14 NPTF	Thermowell suction
SV-1	3 in. Square Flange	Vapor injection
TW-1	3/4-14 NPTF	Thermowell discharge

Table 2: 90° Elbow adapters/O-rings - straight thread to tube

Number	Tube OD (in.)	Tube end UN/UNF-2A (in.)	Port THD UN/UNF-2A (in.)	O-ring
944A0288H01	1/2	3/4-16	3/4-16	980A0012K62
944A0288H02	1/2	3/4-16	9/16-18	980A0012K60
944A0288H03	1/2	3/4-16	7/8-14	980A0012K64
944A0288H04	1/2	3/ 4-16	1 1/16-12	980A0012K66
944A0288H05	5/8	7/8-14	7/8-14	980A0012K64
944A0288H06	5/8	7/8-14	3/4-16	980A0012K62
944A0288H07	5/8	7/8-14	1 1/16-12	980A0012K66
944A0288H08	3/4	1 1/16-12	1 1/16-12	980A0012K66
944A0288H09	3/4	1 1/16-12	3/4-16	980A0012K62
944A0288H10	3/4	1 1/16-12	7/8-14	980A0012K64
944A0288H11	3/4	1 1/16-12	1 5/16-12	980A0012K69
944A0288H12	7/8	1 3/16-12	1 3/16-12	980A0012K68
944A0288H13	1	1 5/8-12	1 5/16-12	980A0012K69
944A0288H14	1	1 5/16-12	1 1/16-12	980A0012K66
944A0288H15	1 1/4	1 5/8-12	1 5/8-12	980A0012K71
944A0288H16	1 1/2	1 7/8-12	1 7/8-12	980A0012K72

Table 3: Straight adapters/O-rings - straight thread to NPTF

Straight thread size (in.)	NPTF Size (in.)	FRICK part number	O-ring
9/16-18	1/4-18	944A0246H01	980A0012K60
3/4-16	1/4-18	944A0246H02	980A0012K62
3/4-16	3/8-18	944A0246H03	980A0012K62
3/4-16	1/2-14	944A0246H04	980A0012K62
7/8-14	1/4-18	944A0246H05	980A0012K64
7/8-14	3/8-18	944A0246H06	980A0012K64
7/8-14	1/2-14	944A0246H07	980A0012K64
7/8-14	3/4-14	944A0246H08	980A0012K64
1 1/16-12	1/2-14	944A0246H09	980A0012K66
1 1/16-12	3/4-14	944A0246H10	980A0012K66
1 3/16-12	1/2-14	944A0246H11	980A0012K68
1 3/16-12	3/4-14	944A0246H12	980A0012K68
1 5/16-12	1/2-14	944A0246H13	980A0012K69
1 5/16-12	3/4-14	944A0246H14	980A0012K69
1 5/16-12	1-11 1/2	944A0246H15	980A0012K69
1 5/8-12	1-11 1/2	944A0246H16	980A0012K71
1 5/8-12	1 1/4-11 1/2	944A0246H17	980A0012K71
1 7/8-12	1-11 1/2	944A0246H18	980A0012K72
1 7/8-12	1 1/2-11 1/2	944A0246H19	980A0012K72
7/16-20	1/4-18	944A0246H20	980A0012K58

Table 4: FRICK compressor oils

Oil type	Recommended applications for FRICK refrigerant oils[1] Refrigerant[2]	Suction temperature °F	Ordering information Item numbers 1 gal	5 gal	55 gal	330 gal tote[3]
#2A	Halocarbons	-50°+	–	111Q0550019	111Q0550020	333Q0001866
#2B	Halocarbons	-50°+	–	–	–	–
#3	R-717	-50°+	333Q0001842	111Q0550001	111Q0550010	333Q0001861
#4	R-717	-50°+	–	–	111Q0550005	–
#5	Halocarbons	-50°+	–	–	111Q0550009	–
#6	Halocarbons	-70°+	–	333Q0000940	333Q0000941	–
#7	Halocarbons	-70°+	–	111Q0550024	111Q0550025	–
#9	R-717	-50°+	–	333Q0000850	333Q0000849	333Q0001862
#9ST	R-717	-50°+	–	333Q0001905	333Q0001904	–
#10A	R-717	-20°+	–	994A0002H01	994A0002H02	–
#11	R-717	-80°+	–	333Q0000852	333Q0000851	333Q0001863
#11ST	R-717	-70°+	–	333Q0001907	333Q0001906	–
#11FST	R-717	-65°+	–	994A0002H03	994A0002H04	–
#12	Hydrocarbons	N/A	333Q0001140	333Q0001141	333Q0001142	–
#12B	Hydrocarbons	N/A	–	333Q0001883	333Q0001884	–
#13	HFC	N/A	333Q0000511	333Q0001253	333Q0001254	–
#13B	HFC	N/A	333A0001939	333Q0001938	333Q0001937	–
#14	CO_2	N/A	333Q0001143	333Q0001144	333Q0001145	–
#18	Landfill gas	N/A	–	–	333Q0001892	–
#19	R-717	N/A	–	333Q0001900	333Q0001899	–
#20	R-717	N/A	–	333Q0001902	333Q0001903	–
NG#1	Hydrocarbons	N/A	–	–	333Q0001850	–
NG#2	Hydrocarbons	N/A	–	–	333Q0001851	–
NG#3	Hydrocarbons	N/A	–	–	333Q0001852	–
CM#1	CO_2	N/A	–	994A0002H05	994A0002H06	–
CM#2	CO_2	N/A	–	994A0002H07	994A0002H08	–
		Shipping weight:	**8 lb**	**40 lb**	**466 lb**	**2720+ lb**
Oil analysis kit		**333Q0001853**				
Tube of ODP motor grease		**333Q0001860**				

1. For specific application questions, consult the factory.
2. For gases and refrigerants not listed, consult the factory.
3. Reusable drain valve for tote - 333Q0001865.

Table 5: FRICK sea blue paint

Packages painted before October 8, 2018 [1]	
Size	**Epoxy (matte finish)**
16 oz spray can	993A0001H01
1 gal kit	333Q0000404 [2]
2 gal kit	333Q0000724 [2]
Packages painted after October 8, 2018 [3]	
Size	**Polyurethane (high gloss)**
0.3 oz touch-up pen	993A0030H05
12 oz spray can	993A0030H06
0.6 oz brush bottle	993A0030H07
1 gal primer	993A0029H02 [4]
1 quart topcoat	993A0030H04 [5]
1 gal topcoat	993A0030H03 [5]

(1) Packages painted before October 2018 used a conventional matte finish epoxy paint.
(2) Mixing Ratio: One part resin to one part cure. Requires mixing.
(3) The standard FRICK Sea Blue paint was changed to high gloss between October and December, 2018. For packages received during the transition, confirm the paint exhibits an automotive shine before ordering the high gloss option (reference NS-16-18).
(4) Matte finish suitable for primer for high gloss top coat.
(5) This top coat comes premixed. Note that when painting bare metal, apply a suitable primer before applying this topcoat. Use 993A0029H02 or 333Q0000404 as a primer.

Table 6: Electric motor bearing grease

Part Number	Description
994A0003H01	For Motors requiring Polyrex EM Grade 2: (13.7 oz tube - BLUE Grease)
994A0004H01	For Motors requiring Isoflex NBU 15: (14.1 oz tube - BEIGE Grease)

Table 7: Numerical parts list

Item number	Fig. and index no.	Item number	Fig. and index no.	Item number	Fig. and index no.
111Q0451313	2–5	534B0244H01	1–84	534E0683C01	1–15
111Q0740728	2–8	534B0283H01	3–2	534E1077C01	1–13
111Q0740729	2–7	534B0293H01	3–1	901A0085H04	3–9
111Q0740741	1–2	534B0294H01	2–1	901A0085H19	3–7
111Q0740784	3–6	534B0426H01	1–107	901A0196H12	1–124
111Q0740872	1–75	534B0501H01	2–4	901A0207H03	1–67
111Q0940141	2–9	534B0651H01	1–31	901A0222H09	1–70
333Q0000376	1–108	534B0910H04	1–87	901A0223H08	1–106
531A0117H12	1–105	534C0096H05	3–8	901A0223H09	1–73
534A0031H01	1–37	534C0096H13	3–5	901A0223H16	1–72
534A0032H02	1–54	534C0187H11	1–65	901A0225H05	1–74
534A0033H01	1–46	534C0194H42	1–122	901A0231H01	1–68
534A0034H01	1–38	534C0194H51	1–2	901A0232H12	1–71
534A0035H09	1–89	534C0194H51	1–119	905A0021H08	1–93
534A0035H13	1–88	534C0432C01	3–4	944A0010H05	1–102
534A0037H02	1–3	534C0487H01	1–30	944A0010H09	1–101
534A0037H10	1–79	534C0492H01	1–33	944A0228H08	1–112
534A0037H12	1–80	534C0493C01	1–39	944A0358H03	1–103
534A0037H15	1–81	534C0510H01	1–66	959A0054H34	1–61
534A0037H19	1–78	534C0569H01	1–40	959A0054H36	1–62
534A0037H21	1–113	534C0570H01	1–41	959A0057H07	1–104
534A0038H08	1–76	534C0701H06	1–53	959A0057H18	1–63
534A0038H10	1–77	534C1356H03	1–47	980A0012A11	1–900
534A0046H01	2–3	534C1568H01	1–123	980A0012A67	1–901
534A0076H04	1–69	534C1587H01	1–121	980A0012A79	1–902
534A0191H02	1–3	534C2157H01	1–45	980A0012B04	1–903
534A0193H02	1–3	534D0363G01	1–27	980A0012B81	1–904
534A0251H01	1–55	534D0367C01	1–7	980A0012B90	1–905
534A0263H01	2–2	534D0368C01	1–29	980A0012H01	1–906
534A0634H02	1–2	534D0369C01	1–16	980A0012H02	1–907
534A0662H04	1–48	534D0370C01	1–14	980A0012H03	1–908
534A0839G02	1–1	534D0374C01	1–25	980A0012H04	1–909
534B0004H25	1–51	534D0375C01	1–23	980A0012H05	1–910
534B0004H26	1–52	534D0390H03	1–3	980A0012H06	1–911
534B0004H34	1–50	534D0391C01	1–24	980A0012H41	1–912
534B0006H07	1–64	534D0392H01	1–35	980A0012H81	1–913
534B0014H22	1–120	534D0407G05	1–2	980A0012K62	1–914
534B0015H06	1–86	534D0408G01	1–44	980A0012K66	1–915
534B0055G05	1–28	534D0412C01	1–8	980A0012K74	1–916
534B0062C01	2–6	534D0464G12	1–3	980A0012K75	1–917
534B0101H28	1–118	534D0523G01	1–26		
534B0110H01	3–3	534D0639H01	1–34		
534B0112H01	1–32	534D0766C01	1–20		
534B0125H09	1–91	534D0862C01	1–6		
534B0125H13	1–90	534D1041C01	1–2		
534B0125H14	1–92	534D1135C01	1–22		
534B0149H01	1–82	534D1135C02	1–21		
534B0151H01	1–83	534D1166C01	1–4		
534B0174H09	1–85	534D1168C01	1–5		
534B0182H01	1–49	534D1400C01	1–18		
534B0239H01	1–36	534D1401C01	1–19		
534B0240H01	1–9	534D1402C01	1–17		
534B0242H01	1–10	534D1606C01	1–12		

October 2023 Revisions

Throughout - Updated Frick and Johnson Controls logos.
- Updated section heading format.
- Set tablers and figure captions to left-aligned.

Page 3 – Added note (1) and (2)

August 2019 Revisions

Page 14 – Updated 2 gal paint order number.

July 2019 Revisions

Throughout - Updated measurements formatting.

Page 8 - Updated quantity for item number 534A0251H01 from 12 to 24.
- Removed threads per inch measurement for 534C0194H51 and 534C0194H42.

Page 14 - Updated information in Frick Sea Blue paint table and relevant notes.

Form: 070.252-SPL (2023-10)
Supersedes: 070.252-SPL (2019-08)
Subject to change without notice
Published in USA • 10/23 • PDF
© 2023 Johnson Controls Int'l PLC - All Rights Reserved

Johnson Controls
100 Cumberland Valley Avenue
Waynesboro, PA 17268-1206 USA
Phone: 717-762-2121 • FAX: 717-762-8624
www.jci.com/FRICK